Funkey 37 Keyboard

FunKey
37

Bedienungsanleitung / Users manual

00024012
Version 03/2015

D
E
U
T
S
C
H

Einleitung:

Herzlichen Dank,

dass Sie sich für das **Funkey 37 Keyboard** entschieden haben.

Wir wünschen Ihnen viel Spaß und Freude mit Ihrer neuen Funkey 37 Keyboard.

Bitte lesen Sie diese Anleitung aufmerksam, um die praktischen Funktionen des **Funkey 37 Keyboard** voll nutzen zu können.

Außerdem empfehlen wir Ihnen, dieses Handbuch an einem sicheren und leicht zugänglichen Ort aufzubewahren, um später darin nachschlagen zu können.

Achtung !

Vor dem ersten Einschalten und der Inbetriebnahme des Instruments lesen Sie auf jeden Fall die Sicherheitsanweisungen durch, um Verletzungen sowie Beschädigungen des Gerätes zu vermeiden.

Bedienungsanleitung (deutsch) ab Seite 2

E
N
G
L
I
S
H

Introduction

Thank you for your purchase of the **Funkey 37 Keyboard**.

We hope that you will enjoy the use of the Funkey 37 Keyboard.

Please read through this manual carefully before beginning to use, so that you will be able to take full advantage of the **Funkey 37 Keyboard** features and enjoy trouble-free operation for years to come.

Please keep this manual at a safe and dry place where you easily can access it.

Caution !

Before switching on the instrument or device read carefully the safety instructions to avoid serious injuries or damage of the product.

Operators manual (english) -> start from page 5

Vorsichtsmaßnahmen

BITTE SORGFÄLTIG DURCHLESEN, EHE SIE WEITERMACHEN

Warnung:

Befolgen Sie unbedingt die nachfolgend beschriebenen grundlegenden Vorsichtsmaßnahmen, um die Gefahr einer schwerwiegenden Verletzung oder sogar tödlicher Unfälle, von elektrischen Schlägen, Kurzschlüssen, Beschädigungen, Feuer oder sonstigen Gefahren zu vermeiden. Zu diesen Vorsichtsmaßnahmen gehören die folgenden Punkte, die jedoch keine abschließende Aufzählung darstellen:

Netzanschluss/Netzanschlusskabel (bei Geräten mit Netzanschluss/Netzadapter):

• Verwenden Sie ausschließlich die für das Gerät vorgeschriebene richtige Netzspannung. Die erforderliche Spannung finden Sie auf dem Typenschild des Geräts.
• Prüfen Sie den Netzstecker in regelmäßigen Abständen und entfernen Sie eventuell vorhandenen Staub oder Schmutz, der sich angesammelt haben kann.
• Verwenden Sie ausschließlich die mitgelieferten Netzkabel/Stecker.
• Verlegen Sie das Netzkabel niemals in der Nähe von Wärmequellen, etwa Heizkörpern oder Heizstrahlern, biegen Sie es nicht übermäßig und beschädigen Sie es nicht auf sonstige Weise, stellen Sie keine schweren Gegenstände darauf und verlegen Sie es nicht an einer Stelle, wo jemand darauf treten, darüber stolpern oder etwas darüber rollen könnte.
• Wenn Sie den Netzstecker aus dem Gerät oder der Netzsteckdose abziehen, ziehen Sie stets am Stecker selbst und niemals am Kabel. Wenn Sie am Kabel ziehen, kann dieses beschädigt werden.
• Ziehen Sie stets den Netzstecker aus der Netzsteckdose heraus, wenn das Gerät längere Zeit nicht benutzt wird oder während eines Gewitters.
• Schließen Sie das Gerät niemals mit einem Mehrfachsteckverbinder an eine Steckdose an. Hierdurch kann sich die Tonqualität verschlechtern oder sich die Netzsteckdose überhitzen.

Öffnen verboten:

• Versuchen Sie nicht, das Gerät zu öffnen oder Teile im Innern zu zerlegen oder sie auf irgendeine Weise zu verändern. Das Gerät enthält keine Teile, die vom Benutzer gewartet werden könnten. Wenn das Gerät nicht richtig zu funktionieren scheint, benutzen Sie es auf keinen Fall weiter!

Gefahr durch Wasser:

• Achten Sie darauf, dass das Gerät nicht durch Regen nass wird, verwenden Sie es nicht in der Nähe von Wasser oder unter feuchten oder nassen Umgebungsbedingungen und stellen Sie auch keine Behälter mit Flüssigkeiten darauf, die herausschwappen und in Öffnungen hineinfließen könnte.
• Schließen Sie den Netzstecker niemals mit nassen Händen an oder ziehen Sie ihn heraus.

Falls Sie etwas ungewöhnliches am Gerät bemerken:

• Wenn das Netzkabel ausgefranst ist oder der Netzstecker beschädigt wird, wenn es während der Verwendung des Geräts zu einem plötzlichen Tonausfall kommt, oder wenn es einen ungewöhnlichen Geruch oder Rauch erzeugen sollte, schalten Sie den Netzschalter sofort aus, ziehen Sie den Netzstecker aus der Netzsteckdose!

Aufstellort:

• Setzen Sie das Gerät niemals übermäßigem Staub,
Vibrationen oder extremer Kälte oder Hitze aus (etwa durch direkte Sonneneinstrahlung, die Nähe einer Heizung oder Lagerung tagsüber in einem geschlossenen Fahrzeug), um die Möglichkeit auszuschalten, dass sich das Bedienfeld verzieht oder Bauteile im Innern beschädigt werden.
• Betreiben Sie das Gerät nicht in der Nähe von Fernsehgeräten, Radios, Stereoanlagen, Mobiltelefonen oder anderen elektrischen Geräten. Anderenfalls kann durch das Gerät oder die anderen Geräte ein Rauschen entstehen.

• Stellen Sie das Gerät nicht an einer instabilen Position ab, wo es versehentlich umstürzen könnte.
• Ehe Sie das Gerät bewegen, trennen Sie alle angeschlossenen Kabelverbindungen ab.
• Stellen Sie das Gerät nicht direkt an eine Wand (halten Sie einen Abstand von mindestens 3 cm von der Wand ein), da es andernfalls aufgrund unzureichender Luftzirkulation zu einer Überhitzung des Geräts kommen kann.
• Stellen Sie keine offenen Flammen, wie z.B. Kerzen, auf dem Gerät ab. Eine offene Flamme könnte umstürzen und einen Brand verursachen.

Auspacken:

Öffnen Sie die Verpackung und überprüfen Sie den Inhalt auf Vollständigkeit laut Spezifikation. Überprüfen Sie das Keyboard und Zubehör auf Beschädigungen bevor sie dieses in Betrieb nehmen. Nehmen Sie notfalls Kontakt mit Ihrem Händler auf.

Vorbereitung:

Stellen Sie das Gerät auf einer ebenen Fläche auf. Überprüfen Sie die verfügbare Netzspannung mit der Spezifikation des Gerätes. Verbinden Sie das Netzteil mit Netzsteckdose und der Buchse auf der Rückseite des Geräts. Alternativ können Sie das Keyboard mit Batterien betreiben. Öffnen Sie das Batteriefach auf der Geräteunterseite und legen Sie die Batterien ein.

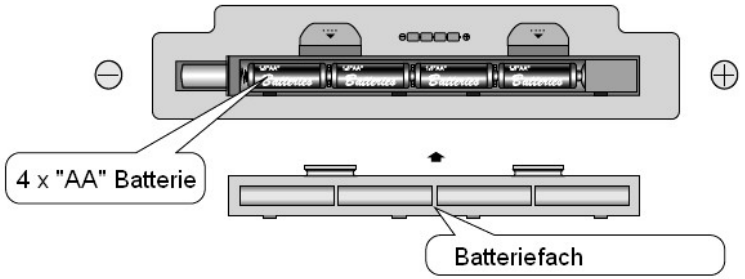

Achten Sie auf richtige Polung der Batterien. Wenn Sie das Gerät längere Zeit nicht benutzen, entfernen Sie die Batterien.

Bedienung:

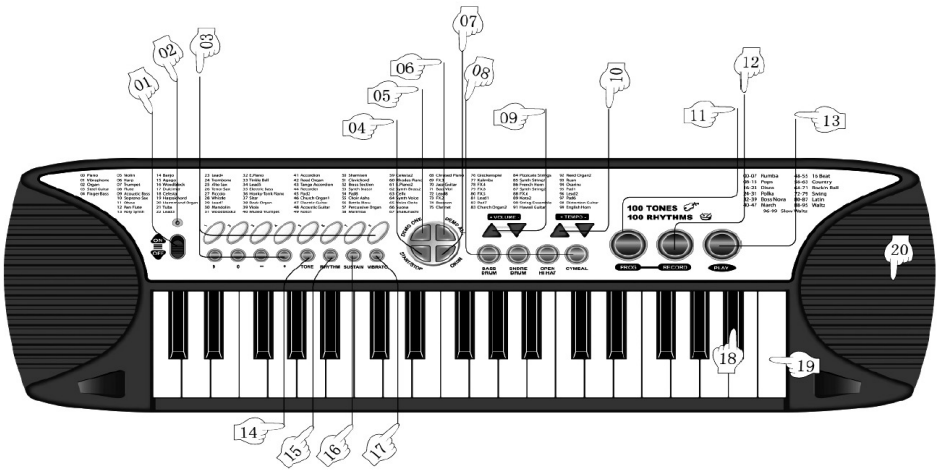

(1) Ein/Aus-Schalter

(2) Kontrollampe Ein/Aus, leuchtet wenn das Keyboard betriebsbereit ist

(3) Numerische Tasten 0-9 / Tasten +/- zur Auswahl von Sound (Instrument) und Begleitrhythmus

(4) Start/Stop – starten/stoppen Sie den Begleitrhythmus oder Ihre Aufnahme

(5) Demo One – spielt immer nur einen Demosong ab

(6) Demo All – alle 16 Demosongs werden hintereinander abgespielt

(7) OKON (One Key One Note)

(8) Percussion – Bass Drum / Snare Drum / Offene HiHat / Geschlossene HiHat

(9) Gesamtlautstärke Lauter/Leiser

(10) Tempo - Begleitrhythmus Schneller/Langsamer

(11) Programmierung - zur Aufnahme von bis zu 16 Percussion-Tastendrücken (8), anschließendes Abspielen durch Taste Play

(12) Aufnahme (Record) – drücken Sie diese Taste um anschließend bis zu 64 Keyboard-Tastendrücke (Noten) aufzunehmen

(13) Play/Start – Wiedergabe der Aufnahme

(14) Sound – nach Drücken dieser Taste können Sie mit den numerischen Tasten (3) einen Sound (Instrument) auswählen

(15) Rhythmus – nach Drücken dieser Taste können Sie mit den numerischen Tasten (3) einen Begleitrhythmus auswählen

(16) Sustain – (de)aktiviert die Sustain-Funktion (Nachklingen)

(17) Vibrato – (de)aktiviert die Vibrato-Funktion (Veränderung der Frequenz)

(18) Schwarze Tasten – Keyboard Tastatur

(19) Weisse Tasten – Keyboard Tastatur

(20) Lautsprecher

Die Liste der Instrumente ,Demosongs und Begleitrhythmen finden Sie weiter unten im Anhang (Appendix).

WEEE Erklärung

Ihr Produkt wurde mit hochwertigen Materialien und Komponenten entworfen und hergestellt, die recycelbar sind und wieder verwendet werden können. Dieses Symbol bedeutet, dass elektrische und elektronische Geräte am Ende ihrer Nutzungsdauer vom Hausmüll getrennt entsorgt werden müssen. Bitte entsorgen Sie dieses Gerät bei Ihrer örtlichen kommunalen Sammelstelle oder im Recycling Center. Bitte helfen Sie mit, die Umwelt, in der wir leben, zu erhalten.

Technische Änderungen und Änderungen im Erscheinungsbild vorbehalten. Alle Angaben entsprechen dem Stand bei Drucklegung. Für die Richtigkeit und Vollständigkeit der enthaltenen Beschreibungen, Abbildungen und Angaben übernimmt Musikhaus Kirstein GmbH keinerlei Gewähr. Abgebildete Farben und Spezifikationen können geringfügig vom Produkt abweichen. Musikhaus Kirstein GmbH - Produkte sind nur über autorisierte Händler erhältlich. Distributoren und Händler sind keine Handlungsbevollmächtigten von Musikhaus Kirstein GmbH und haben keinerlei Befugnis, die Musikhaus Kirstein GmbH in irgendeiner Weise, sei es ausdrücklich oder durch schlüssiges Handeln, rechtlich zu binden. Diese Bedienungsanleitung ist urheberrechtlich geschützt. Jede Vervielfältigung, bzw. jeder Nachdruck, auch auszugsweise, und jede Wiedergabe der Abbildungen, auch in verändertem Zustand, ist nur mit schriftlicher Zustimmung der Firma Musikhaus Kirstein GmbH gestattet.

Precautions

Please read carefully before proceeding

Warning:

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

Power supply / power cord (devices with power cords/power supplies):

• Only use the voltage specified as correct for the device. The required voltage is printed on the type plate of the device. Check the power cable from time to time regarding dirt, damage or other influence.
• Use only the included power cord / power supply or adaptor. Do not place the power chord near heat sources such as heaters or radiators, and do not excessively bend or otherwise damage the cord, place heavy objects on it, or place it in a position where anyone could walk on, trip over, or roll anything over it.
• Remove the electric plug from the outlet when the device is not to be used for extended periods of time, or during electrical storms. When removing the electric plug from the device or an outlet, always hold the plug itself and not the cord. Pulling by the cord can damage it.
• To avoid generating unwanted noise, make sure there is adequate distance (50 cm or more) between the AC power adaptor and the device. Do not cover or wrap the AC power adaptor with a cloth or blanket.

Location:

• When setting up the device, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch and disconnect the plug from the outlet. Even when the power switch is turned off, electricity is still flowing to the product all the minimum level. When you are not using the product for a long time, make sure to unplug the power cord from the wall AC outlet.
• Inadequate ventilation can result in overheating, possibly causing damage to the device(s), or even fire.
• Do not expose the device to excessive dust or vibrations, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day) to prevent the possibility of panel disfiguration or damage to the internal components.
• Do not place the device in an unstable position where it might accidentally fall over.
• Do not block the vents. This device has ventilation holes at the bottom/rear to prevent the internal temperature from becoming too high. In particular, do not place the device on its side or upside down. Inadequate ventilation can result in overheating, possibly causing damage to the device(s), or even fire.
• Do not use the device in the vicinity of a TV, radio, stereo equipment, mobile phone, or other electric devices. Doing so may result in noise, both in the device itself and in the TV or radio next to it.

Connections and handling:

• Before connecting the device to other devices, turn off the power for all devices. Before turning the power on or off for all devices, set all volume levels to minimum. • Do not use the device or headphones for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.
• Do not rest your weight on the device or place heavy objects on it, and avoid use excessive force on the buttons, switches or connectors

Do not open:

• Do not open the device or attempt to disassemble the internal parts or modify them in any way. The device contains no user-servicable parts. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified service personnel.

Water warning:

• Do not expose the instrument to rain, use it near water or in damp or wet conditions on it containing liquids which might spill into any openings. Never insert or remove an electric plug with wet hands.

If you notice any abnormality:

• If the power cord or plug becomes frayed or damaged, or if there is a sudden loss of sound during use of the device, or if any unusual smells or smoke should appear to be caused by it, immediately turn off the power switch, disconnect the electric plug from the outlet, and have the device inspected by qualified service personnel.

Remove package and check:

Open carton to check whether all necessary parts are included according the specification list. Please contact your distributor if there is something missing. Check the appearance of the keyboard and all accessories to see whether there is some obvious damage. Please contact distributor once you find something abnormal and stop using the keyboard.

Installation:

Take away all pack material, place the keyboard in horizontal position (ground) on a solid flat surface. Check if your net voltage specification is correct. Plug in the net adaptor and connect to net voltage (see specification). For wireless use you can insert batteries in battery compartment of keyboard.

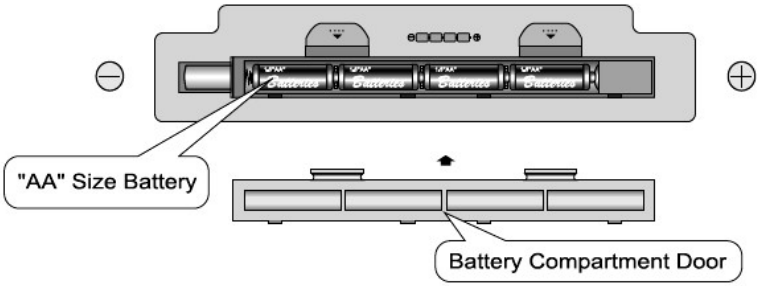

Observe battery polarity (+/-). If the keyboard is not used for longer period, please remove the batteries .

Operation:

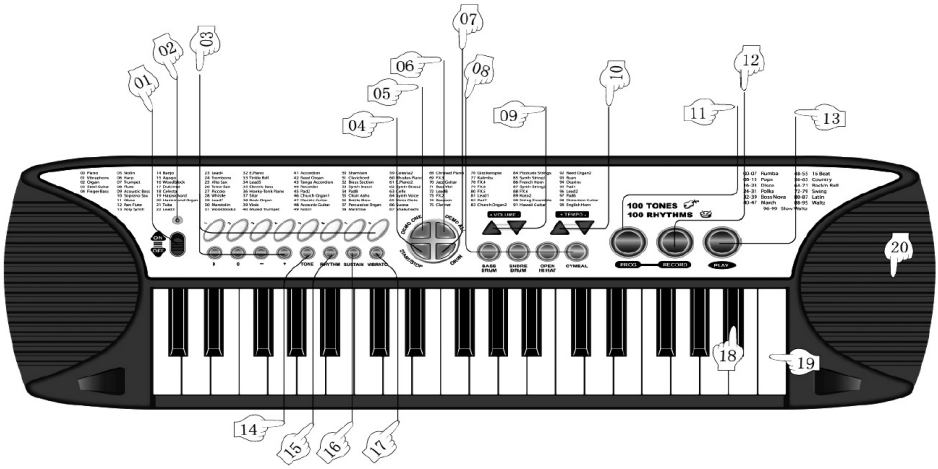

(1) Power On/Off

(2) On/Off LED – “On” when keyboard is ready to play

(3) Numeric keys 0-9, keys +/- to select sound or rhythm

(4) Start/Stop – starts or stops rhythm or your record

(5) Demo One – plays one demo song at a time

(6) Demo All – plays all demo songs

(7) OKON (One Key One Note)

(8) Percussion keys – Bass Drum / Snare Drum / Open HiHat / Closed HiHat

(9) Volume +/-

(10) Tempo +/- (Rhythm)

(11) PROGRAM – press key and play up to 16 of the Percussion keys (8), press Play (13) key to start your record

(12) RECORD – press key and start to record up to 64 keyboard notes, press Play (13) key to start your record

(13) Play/Start – starts your record

(14) Sound – select one of 100 sounds with numeric keys (3)

(15) Rhythm – press to activate accompaniment, select one of 100 rhythms with numeric keys (3)

(16) Sustain – switch on / turn off sustain

(17) Vibrato - switch on / turn off vibrato

(18) Black keys – Keyboard

(19) White keys – Keyboard

(20) Speaker

Please find list of sounds (instruments), Demosongs and Rhythms in Appendix.

WEEE declaration

Your product is designed and manufactured with materials and components of high quality, which are recyclable and can be reused. The symbol means that your product should be disposed of separately from household waste when it reaches its end of life. Please dispose of this equipment at your local collection point or recycling center. Please help to protect the environment in which we all live.

All specifications and appearances are subject to change without notice. All information was correct at time of printing. Musikhaus Kirstein GmbH does not guarantee for the accuracy or completeness of any description, photograph or statement contained in this manual. Printed colors and specifications may vary slightly from product. Products from Musikhaus Kirstein GmbH are only sold through authorized dealer. Distributors and dealers are not agents of Musikhaus Kirstein GmbH and have no authority to bind Musikhaus Kirstein GmbH legally in any way. This manual is protected by copyright. Any copying or reprint, even in excerpts, is only allowed with written consent of Musikhaus Kirstein GmbH. The same applies to reproduction or copying of images, even in altered form.

Liste der Sounds (Instrumente) / Sound List

00	Acoustic Grand Piano	50	Synth Strings 2
01	Bright Acoustic Piano	51	Choir Aahs
02	Electronic Grand Piano	52	Voice Oohs
03	Honky Tonk Piano	53	Synth Voice
04	Rhodes Piano	54	Orchestra Hit
05	Chorused Piano	55	Trumpet
06	Harpsichord	56	Trombone
07	Clavi	57	Tuba
08	Celesta	58	Muted Trumpet
09	Glockenspiel	59	French Horn
10	Music Box	60	Brass Section
11	Vibraphone	61	Synth Brass 1
12	Marimba	62	Synth Brass 2
13	Xylophone	63	Soprano Sax
14	Tubular Bells	64	Alto Sax
15	Dulcimer	65	Tenor Sax
16	Drawbar Organ	66	Baritone Sax
17	Percussive Organ	67	Oboe
18	Pock Organ	68	English Horn
19	Church Organ	69	Bassoon
20	Reed Organ	70	Clarinet
21	Accordion	71	Piccolo
22	Harmonica	72	Flute
23	Tank´go Accordion	73	Recorder
24	Acoustic Nylon Guitar	74	Pan Flute
25	Acoustic Steel Guitar	75	Blow Bottle
26	Electric Guitar (Jazz)	76	Shakuhach
27	Electric Guitar (Clean)	77	Whistle
28	Electric Guitar (Muted)	78	Ocarina
29	Overdrive Guitar	79	Lead 1 Square
30	Distortion Guitar	80	Lead 2 (Sawtooth)
31	Acoustic Bass	81	Lead 3 (Calliope)
32	Electric Bass (Finger)	82	Lead 8 (Bass+ Lead)
33	Electric Bass (Pick)	83	Pad 2 (Warm)
34	Fretless Bass	84	Sitar
35	Slap Bass 1	85	Banjo
36	Slap Bass 2	86	Shamisen
37	Synth bass 1	87	Koto
38	Synth Bass 2	88	Kalimba
39	Violin	89	Bag Pipe
40	Viola	90	Fiddle
41	Cello	91	Shanai
42	Contrabass	92	Tinkle Bell
43	Tremolo Strings	93	Agogo
44	Pizzicato Strings	94	Steel Drums
45	Orchestral Harp	95	Woodblock
46	Timpani	96	Melodic Tom
47	String Ensemble 1	97	Breath Noise
48	Tango Accordion	98	Bird Tweet
49	Synth Strings 1	99	Telephone Ring

Liste der Begleitrhythmen / Rhythm list

00	Cabaret Pop	50	Disco Hands
01	European Pop	51	Disco Party
02	90`s Pop	52	Disco Samba
03	8 Beat	53	Dixie Jazz
04	8 Beat Narrative Folk 1	54	Pop New Age
05	8 Beat Narrative Folk 2	55	UK Pop
06	60`s Beat	56	USA March
07	16 Beat	57	Club Dance
08	16 Beat Narrative Folk	58	Rumba
09	16 beat Sliding Dance	59	8 Beat Modern
10	8 Beat Pop	60	Country Ballad
11	8 Beat Soul	61	Hard Rock
12	8 Beat Rock	62	Hully Gully
13	Rap Pop	63	Jive
14	60`s Soul	64	Love Song
15	70`s Soul	65	Medium Jazz
16	Straight Rock	66	Modern Country Pop
17	Techno 1	67	Modern R&B
18	Techno 2	68	Pasodoble
19	Funk	69	Samba 1
20	Mambo 1	70	Samba 2
21	Mambo 2	71	Schlager Rock 1
22	Country 1	72	Schlager Rock 2
23	Country 2	73	Tarantella
24	16 beat Dhuffle	74	Tijuana
25	8 Beat Adria	75	Electro Pop
26	Big Band Shuffle 1	76	Fusion
27	Big Band Shuffle 2	77	Hip Shuffle
28	Big Band Shuffle 3	78	Limbo Rock
29	Fast Band 1	79	Acoustic Ballad
30	Fast Band 2	80	Piano Ballad
31	Cat Groove	81	Reggae
32	Classic Piano	82	Slow & Easy
33	Cumbia	83	Swing Waltz
34	Funky Disco	84	Pub Piano
35	Latin Rock	85	Jazz Big Band
36	Ober Polka	86	Jazz Club
37	Polka Pop	87	Jazz Waltz 1
38	Twist	88	Jazz Waltz 2
39	Unplugged	89	Salsa
40	Blue Grass 1	90	Analog Ballad
41	Blue Grass 2	91	Show Tune
42	Blue Grass 3	92	Calypso
43	Cha Cha	93	Charleston
44	Saturday Night	94	Disco Pop
45	Pop Waltz	95	Disco Soul
46	Club Latin	96	Disco Trot
47	Disci Chocolate	97	E-Ballad
48	Disco Fox	98	Viennese Waltz
49	Disco Funk	99	Euro Beat

Demosongs

00	Jasmine Flower	05	Chanson Du Toreador
01	Mozart`s Piano Sonata	06	Jingle Bells
02	Schubert Lullaby	07	The Maiden`s Prayer
03	For Elise	08	Radetzky March
04	Chopin Nocturnes	09	Spring Song

Technische Daten / Technical data

Funkey 37 Keyboard	
Artikel 00024012	
Tastatur 37 Tasten	Keyboard 37 keys
100 Instrumente	100 Sounds
100 Begleitrhythmen	100 Rhytms
10 Demosongs	10 Demo Songs
4 Drum Sounds	4 Drum Sounds
Gewicht: 1.3 kg	Weight: 1.3 kgs
Netzspannung: AC 220(230)V/50(60) Hz	Net voltage: AC 220(230)V / 50(60) Hz
Abmessungen [L x B x H] 650 mm x 210 mm x 72 mm	Dimensions [L x W x H] 650 mm x 210 mm x 72 mm
Zubehör: Netzteil Bedienungsanleitung	**Accessories:** Net adapter User manual

musikhaus KIRSTEIN.de

Musikhaus Kirstein GmbH
Bernbeurener Strasse 11
86959 Schongau / Germany
Phone 0049-8861-909494-0 / Fax 0049-909494-19

CE